

Flowing Blue



Automatic Water System and Diaphragm Pumps

Shower drain and bilge pump: smooth running, Ignition protected, dry running, equipped with filter, made of corrosion


Type approval by Italian Bureau of Shipping according to **ISO 8846** – Ec Rule no 94/25/c

Art	2600000412/24 2500000412/24	2600000912/24 2500000912/24	2600001212/24 2500001212/24	2600001812/24 2500001812/24
Fittings Details:	Port Connection: 1/4" i.d.hose Self Priming: 1,2 metre	Port Connection: 1/2" i.d.hose Self Priming: 7 metres	Port Connection: 1/2" i.d.hose Self Priming: 7 metres	Port Connection: 1/2" i.d.hose Self Priming: 7metres
Dimension-Weight:	75x173x63	112x170x94	112x190x94	112x210x94
Flow and Pressure:	4 l./min 0.7 bar	8l.min 2,6 bar	12l./min 2,6 bar	18l./min 2,6 bar
Amp Draw:	2.5 Amp. Fuse 5 Amp.	2.5 Amp. Fuse 5 Amp	4 Amp. Fuse 8 Amp	5 Amp. Fuse 8 Amp


Installation and Safety:

- 1) Mount pump vertically or horizontally following a.m. layout
- 2) Use hose clamps on the slip-on hose barb connectors.
- 3) Install an inlet strainer in an accessible location between the tank and pump inlet.
- 4) Fit pump in a dry position, as close as possible to the liquid being pumped, where there is full access to the pump for service.
- 5) All marine pumps discharging overboard must be installed with the discharge well above both static and heeled waterlines
- 6) Pipe runs should be as straight and as short as possible, avoiding rising and dipping over obstructions.
- 7) Use hose clamps. spiral reinforced (with a smooth internal bore), or semi-rigid pipework systems
- 8) Do not use for pumping petrol, petroleum products, or fluids with flash points below 37°C

Winter storage: Completely remove water from pump by removing pipework and running the pump until all the water is expelled

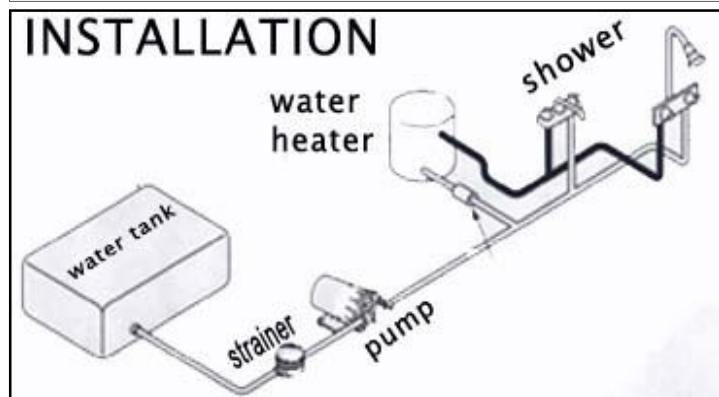

ELECTRICAL CONNECTION

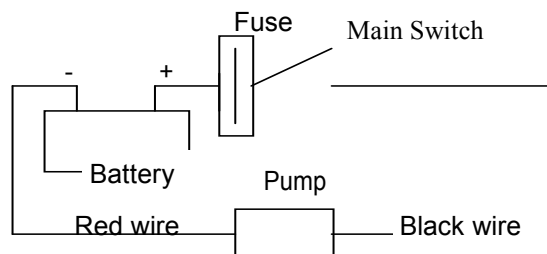

Warranty: Matromarine warrants Flowing Blue to be free of defects in material, and workmanship for a period of two years from the date of purchase.

The manufacturer reserves the right to decide whether to repair or replace the unit.

The warranty shall be void if motor housing is abused or pump internal filter is not present and if otherwise abused.

Warning: Before servicing pump, turn off the pump and drain water from the system